


## Cabin Air Filter

---

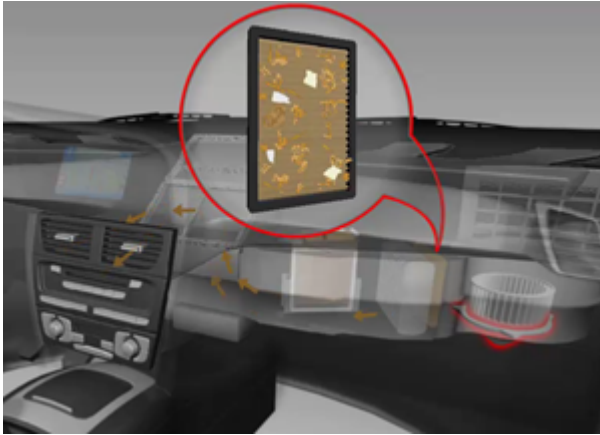

The cabin air filter is usually located under the hood, near the windshield or under the vehicle's dashboard, near the glove box. It filters the air as it is drawn in by the blower motor. The filter mechanically filters dirt and particles entering the cabin of the vehicle, but the filter also contains a layer of carbon that filters out unpleasant odors. A cabin air filter that is plugged will decrease the flow of air through the air vents. The cabin air filter should be checked regularly.

The cabin air filter cleans outside air as it enters the passenger area.